


Dual function signal install - Indian Scout/Scout Bobber

front use only (amber turn/white running light)



polarity converter;
custom dynamics

<https://www.customdynamics.com/universal-turn-signal-polarity-converter>

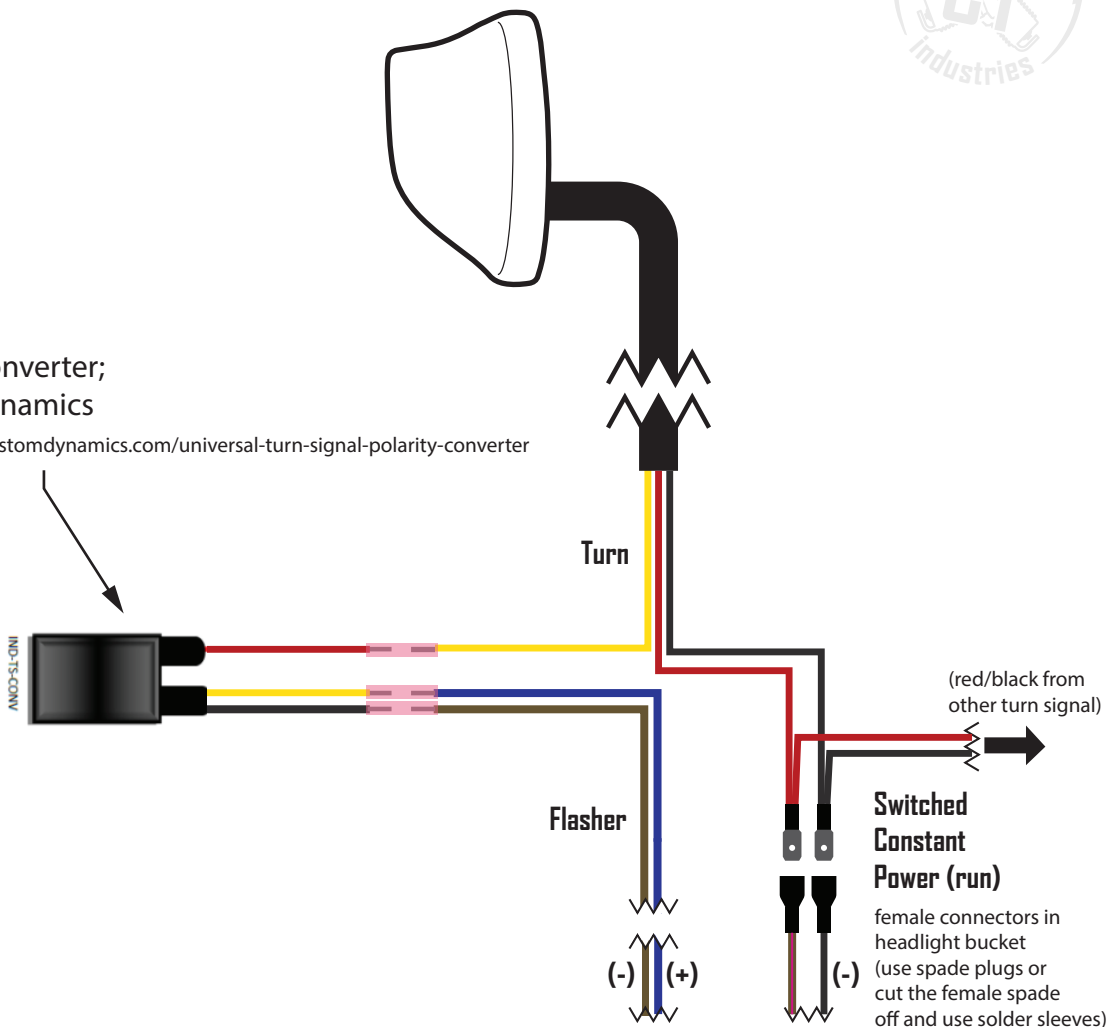

Turn

Flasher

(-) (+)

(red/black from other turn signal)

Switched
Constant
Power (run)

female connectors in
headlight bucket
(use spade plugs or
cut the female spade
off and use solder sleeves)

Scout front
wire harness

df.trn_amb_sct