


# Dual function signal install - Sportster, Dyna, Softail

front use only (white run/amber turn light)

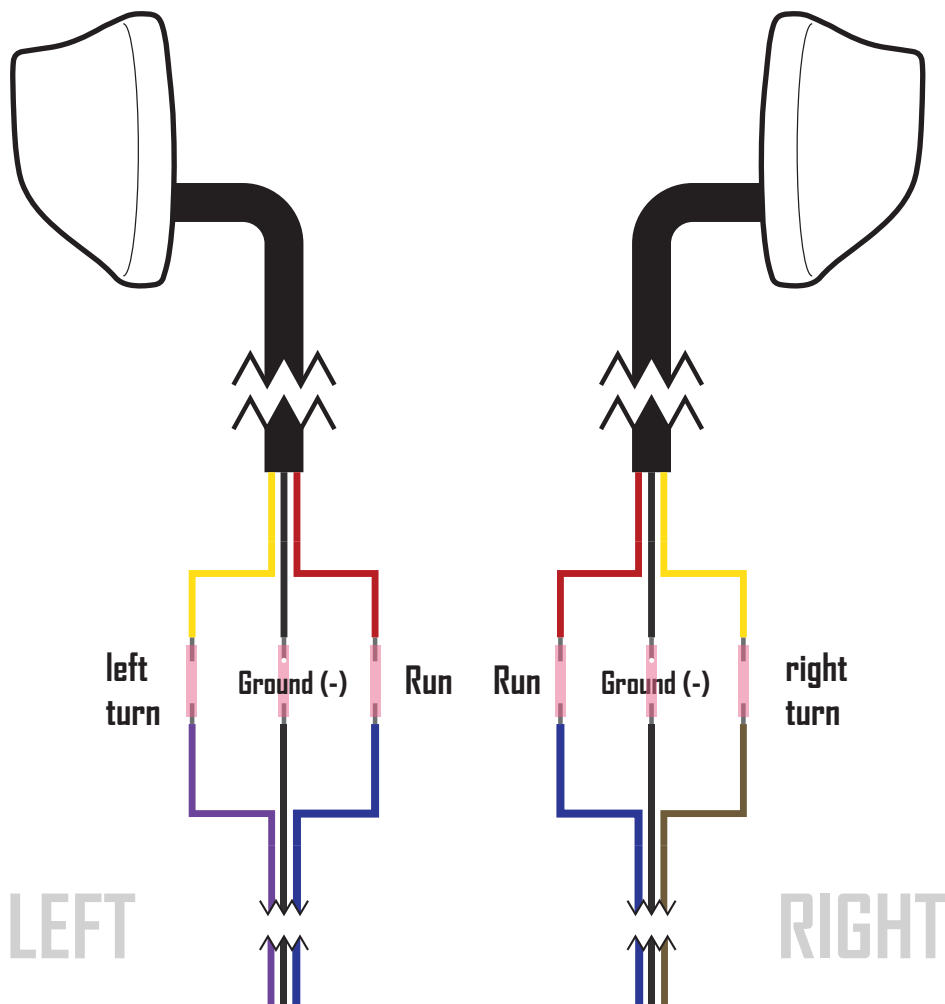

HD  
wire harness

df.trn\_whamb\_hd